



CMI DOORS  
4-111 INKSBROOK DRIVE  
WINNIPEG, MANITOBA, CANADA  
R2R 2V7  
866.229.2220

## FLEXIBLE DOOR MOUNTING INSTRUCTIONS

### Tools Required:



Drill, 1/4" drill bit, 1/2" socket and ratchet, level, center punch and marking pencil.

### Before Beginning Installation:

Check to make sure the opening is plumb, square, level and free from obstructions. Also measure the opening width and height to ensure they match the measurements listed on the packing slip.

### Drill Mounting Holes:

Mark center line on the jamb that goes 11" down from header. Put the top of the hardware bracket against the header. Align with center line on jamb and hardware bracket and mark four mounting holes. Using a center punch mark and then drill 1/4" holes for wood lag screws provided. The 5/16" x 3" lag screws are for wood jambs or wood backed jambs. Other types of jambs will require different fasteners supplied by others.

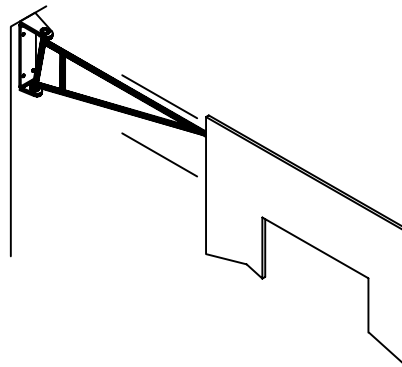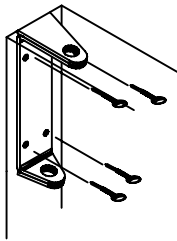

### Mount Hinge to Jamb:

Mount the hinge bracket and support arm securely to the jambs. Use a level on the side of the hinge bracket to check for plumb before final tightening of the lag bolts.

Note: The top of the bracket arm must be level. In some cases, it may be necessary to shim the wall bracket with washers to compensate for the irregularity of the jamb.

### Attach Door to the Hinge and Secure:

Spread the two layers of the door in the upper corner and slide the door over the hinge arm until the door lightly touches the jamb on the hinge side. Secure in place with the turn buckle on the bracket pocket.

**For Further Assistance Please Call 866-229-2220**